



- A** - Auto signal sensing control (always on or auto on with music)
- B** - Bass EQ Boost @ 25Hz (On/Off)
- C** - Variable Phase from 0° to 180°
- D** - Low Pass crossover frequency variable from 50Hz to 100Hz
- E** - Subwoofer level volume control
- F** - Low Frequency Effects Input (Connect from LFE output on receiver, this connection is bypassing the KGND's internal crossover)
- G** - Line level input from preamp or processor. Line level (pass through) output to another amplifier.
- H** - Speaker level inputs from main amplifier and pass through speaker level outputs. (The KGND doesn't show an impedance load back to the main amplifier)
- I** - Power On/Off indicator (Red/Off and Green/On)
- K** - Standard IEC power socket (USA 14awg cord supplied)
- L** - Input Voltage 115V/230V (Change fuse to T5AL if using at 230V!!!!!!)