
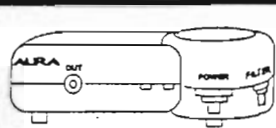


QUICK START

Setting up the Arcade Shaker Kit

**Power Amplifier (A)**


Power Transformer (B)

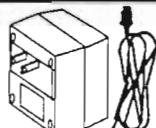

3.5mm Mini Cord (C)



Bass Shaker(D) with Spade Lugs (E)

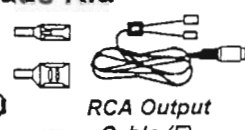


**RCA Output
Cable (F)**



Y Connector (G)

Components of the Bass Shaker™ Arcade Kit.

- 1** Locate both **Game Speaker Wires (W)** and cut them. Strip both ends of each of four wire ends and insert them into the **Y-Connectors (G)**. Crimp the wire ends safely in the connectors.
- 2** Cut **Mini Cord (C)** to desired length, uninsulate the ends and insert them into remaining open terminals on **Y-Connectors (G)** as shown. Crimp safely.
- 3** Plug the **Power Transformer (B)** cord DIN Connector into the **Power Amplifier (A)** jack labeled "POWER PACK".
- 4** Locate an existing power outlet, or, if necessary, add an AC Power strip into the game housing. Plug in the Amplifier **Power Transformer (B)**.
- 5** Mount the **Bass Shaker (D)** in desired location. Cut the **RCA Output Cable (F)** to a desired length and strip both wire ends. Insert the ends into the new **Spade Lugs (E)** and crimp. Attach the **Spade Lugs (E)** to the **Bass Shaker (D)**. Insert the **RCA Connector (F)** into the Amplifier "OUT" jack (A).
- 6** Turn on the amplifier (A) by setting "VOLUME" and "FILTER" levels to desired intensity of bass vibrations.
For optimum performance and volume, a green LED should light, with occasional flashes of red light.

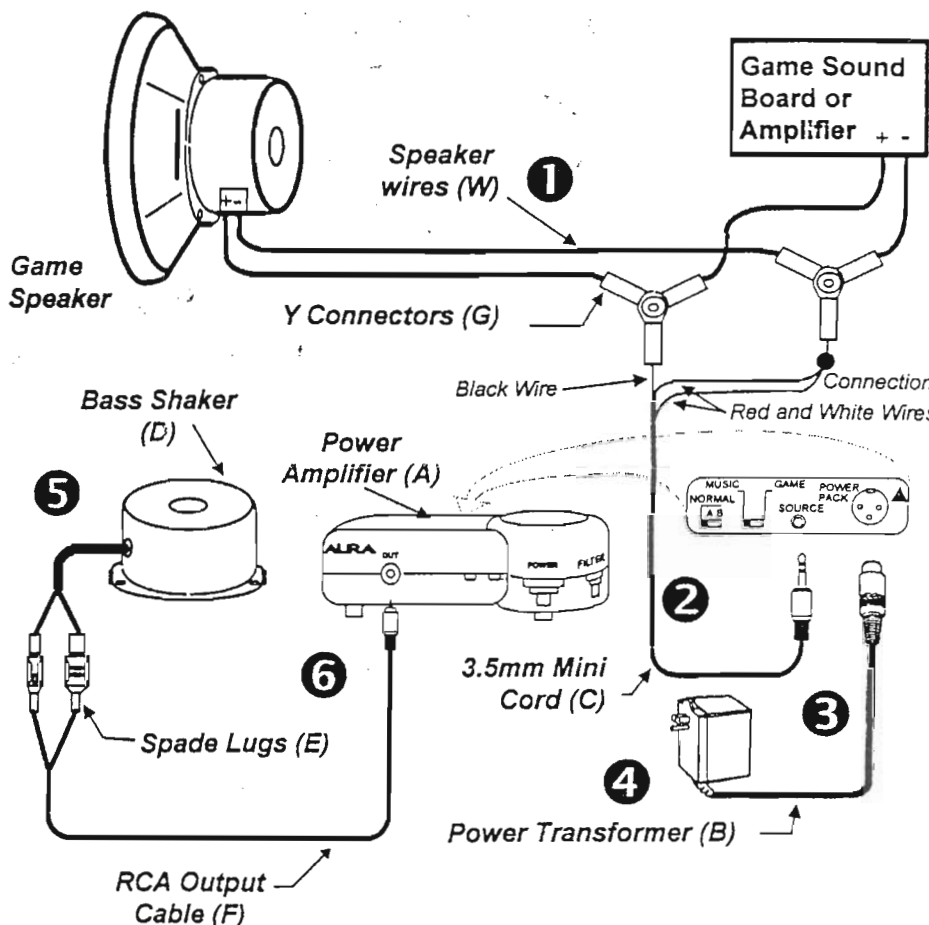

Notes:

- The "MUSIC/GAME" switch must be set to MUSIC position.
- The Bass Shaker must be mounted flush against a flat surface.
- For mounting find a spot that resonates the most.

This contact information is not valid. This product is surplus and is not supported by Aurasound.

Problems?

Call Aura Systems, Inc. Customer Service Monday through Friday, 9:00 AM to 4:00 PM PST.
Our toll-free number is 1-800-909-AURA (1-800-909-2872).