

ROUTER COMPATIBILITY TABLE FOR CIRCLE GUIDE MODELS
200, 270, 300, AND 400

ALL OF THE ROUTERS LISTED BELOW ARE PLUNGE ROUTERS

Remove Plastic Sub-base from Router before mounting
 (Note: Some router bases are not removable)

 
ROUTER MODEL

SCREW SIZE / # OF SCREWS


Black & Decker: RP 200 and SS 1000 RP	—————>	Use 3 - 10-32 Screws
Bosch: 1613, 1450, RA 1166, 1617/1618 1615	—————>	Use 3 - 4MM Screws Use 2 - 10-32 Screws
DeWalt: DW 615, DW 616, DW 618, DW 621, DW 625, DW 6182	—————> —————>	Use 2 - 6MM Screws Use 3 - 10-32 Screws
Elu 177	—————>	Use 2 - 6MM Screws
Fein FT-1800	—————>	Use 2 - 6MM Screws
Freud FT 2000	—————>	Use 2 - 10-32 Screws
Hitachi: M8V, Tr12, M12V KM12VC	—————> —————>	Use 2 - 10-32 Screws Use 3 - 10-32 Screws
Makita: 3612C, 3621 RP 1101	—————> —————>	Use 2 - 10-32 Screws Use 3 - 10-32 Screws
Porter Cable: PC7529, PC690 Series, Pc8529, PC894PK, PC895PK, PC8902/8931	—————>	Use 3 - 10-24 Screws
Rigid R2930 (Plunge)	—————>	Use 3 - 10-32 Screws
Ryobi: RE180PL, Plunge Base, R175	—————>	Use 2 - 10-32 Screws
Sears: 1617-12, 17543, 17517 Digital, 17540, 28084 Professional 315.268.350	—————> —————>	Use 3 - 10-32 Screws Use 2 - 10-32 Screws
Skil: 1823, 1825, 1835, 1840, 1845-02	—————>	Use 3 - 10-32 Screws
Other: If your router is not listed above go to diminsional layout page		

Circle Guide Dimensional Layouts


Remove your router base plate. If you find a mounting hole layout that matches one of these patterns, then your router will fit on our circle guides

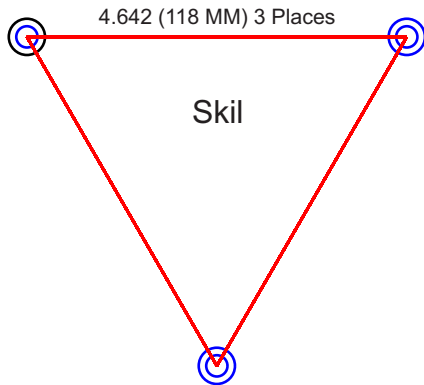


Layout #1

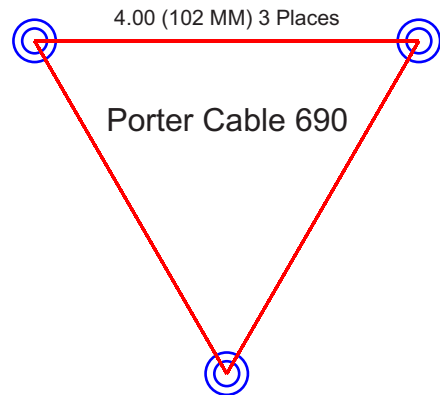 


Layout #2

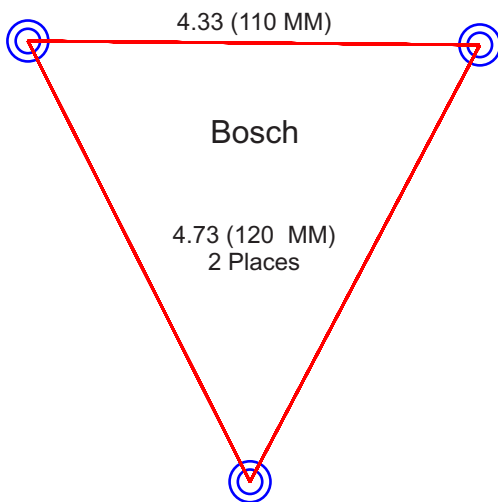 


Layout #3

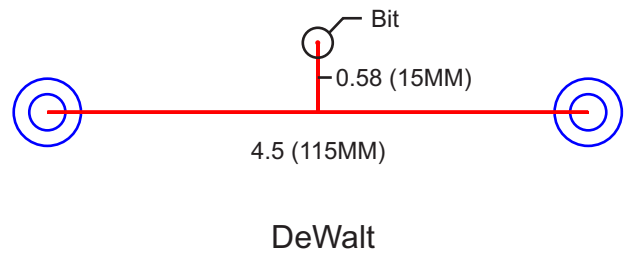 

Layout #4

 

Layout #5

 

Layout #6

ROUTER COMPATIBILITY TABLE FOR ADAPTER PLATES MODELS
500, 525B, 535, 575B

Remove Plastic Sub-base from Router before mounting
 (Note: Some router bases are not removable)

ROUTER MODEL

SCREW SIZE / # OF SCREWS

Black & Decker: RP 200 and SS 1000 RP	—————>	Use 3 - 10-32 Screws
Bosch: 1613, 1450, RA 1166, 1617/1618 1615	—————>	Use 3 - 4MM Screws Use 2 - 10-32 Screws
DeWalt: DW 615, DW 616, DW 618, DW 621, DW 625, DW 6182	—————> —————>	Use 2 - 6MM Screws Use 3 - 10-32 Screws
Elu 177	—————>	Use 2 - 6MM Screws
Fein FT-1800	—————>	Use 2 - 6MM Screws
Freud FT 2000	—————>	Use 2 - 10-32 Screws
Hitachi: M8V, TR12, M12V KM12VC	—————> —————>	Use 2 - 10-32 Screws Use 3 - 10-32 Screws
Makita: 3612C, 3621 RP 1101	—————> —————>	Use 2 - 10-32 Screws Use 3 - 10-32 Screws
Porter Cable: PC7529, PC690 Series, PC8529, PC894PK, PC895PK, PC8902/8931	—————>	Use 3 - 10-24 Screws
Rigid R2930 (Plunge)	—————>	Use 3 - 10-32 Screws
Ryobi: RE180PL, Plunge Base, R175	—————>	Use 2 - 10-32 Screws
Sears: 1617-12, 17543, 17517 Digital, 17540, 28084 Professional, 315.175.040/.050/.060/.070 315.268.350, 315.275.100/.110 315.275.000	—————> —————> —————>	Use 3 - 10-32 Screws Use 2 - 10-32 Screws Use 4 - 10-32 Screws
Skil: 1823, 1825, 1835, 1840, 1845-02	—————>	Use 3 - 10-32 Screws